





**MONTAGGIO CERNIERE TELAIO**  
**HINGE FRAME ASSEMBLY**

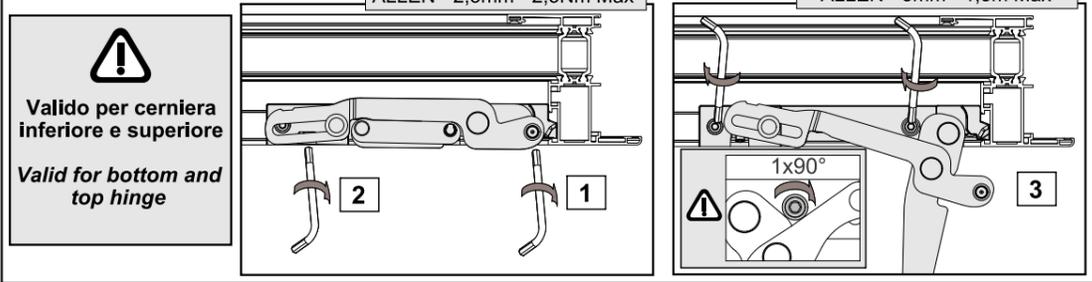


**!**  
Valido per cerniera inferiore e superiore  
Valid for bottom and top hinge

**MONTAGGIO CERNIERA ANTA**  
**HINGE SASH ASSEMBLY**

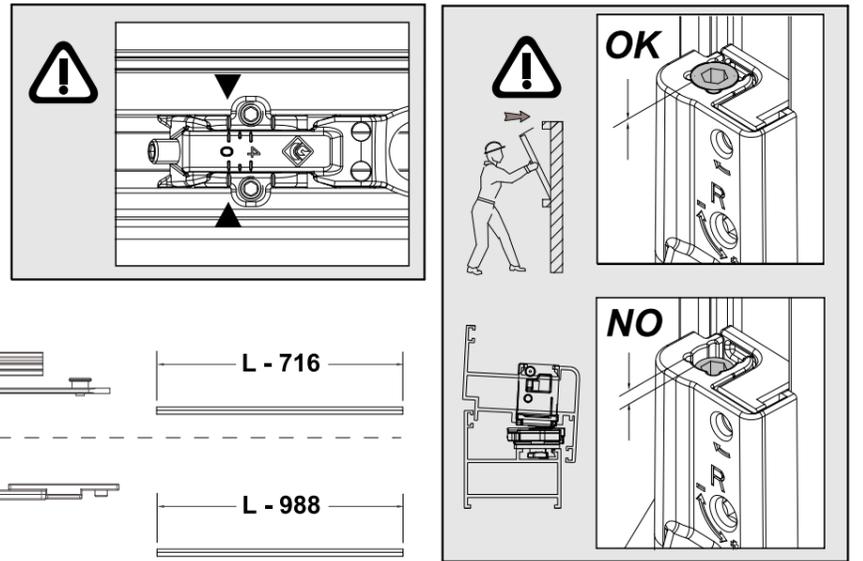


ANTA RIBALTA TILT AND TURN	
COD.	NODO
<b>3520.30</b>	<b>A01 - A05</b>
<b>3400G.30</b>	<b>A03</b>
MANOVRA LOGICA TILT BEFORE TURN	
COD.	NODO
<b>3550L.30</b>	<b>A01 - A05</b>
<b>3400LG.30</b>	<b>A03</b>

$1200\text{ mm} < L \leq 1700\text{ mm}$

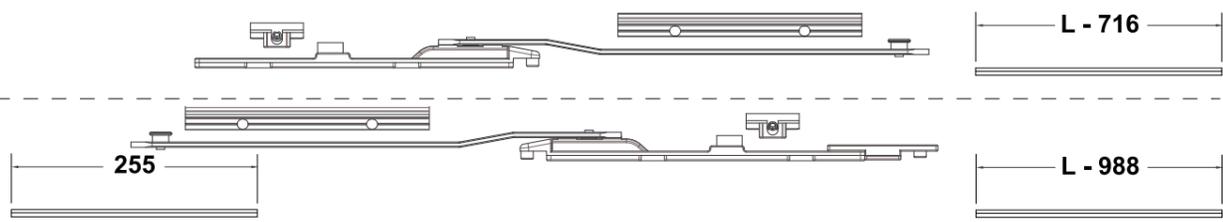




MANOVRA LOGICA TILT BEFORE TURN	
COD.	NODO
<b>3304L.21S/D</b>	<b>A01 - A05</b>
<b>3303L.21S/D</b>	<b>A03</b>
ANTA RIBALTA TILT AND TURN	
COD.	NODO
<b>3304.21S/D</b>	<b>A01 - A05</b>
<b>3303.21S/D</b>	<b>A03</b>

$670\text{ mm} < L \leq 1700\text{ mm}$

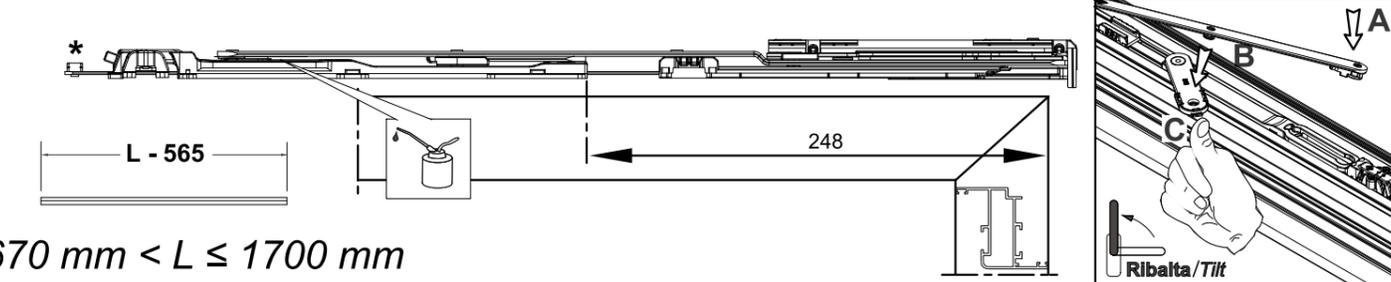


MANOVRA LOGICA TILT BEFORE TURN	
COD.	NODO
<b>3304L.20S/D</b>	<b>A01 - A05</b>
<b>3303L.20S/D</b>	<b>A03</b>
ANTA RIBALTA TILT AND TURN	
COD.	NODO
<b>3304.20S/D</b>	<b>A01 - A05</b>
<b>3303.20S/D</b>	<b>A03</b>




$470\text{ mm} < L \leq 670\text{ mm}$

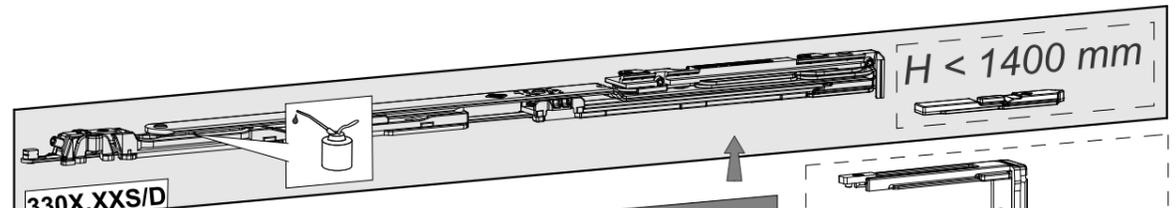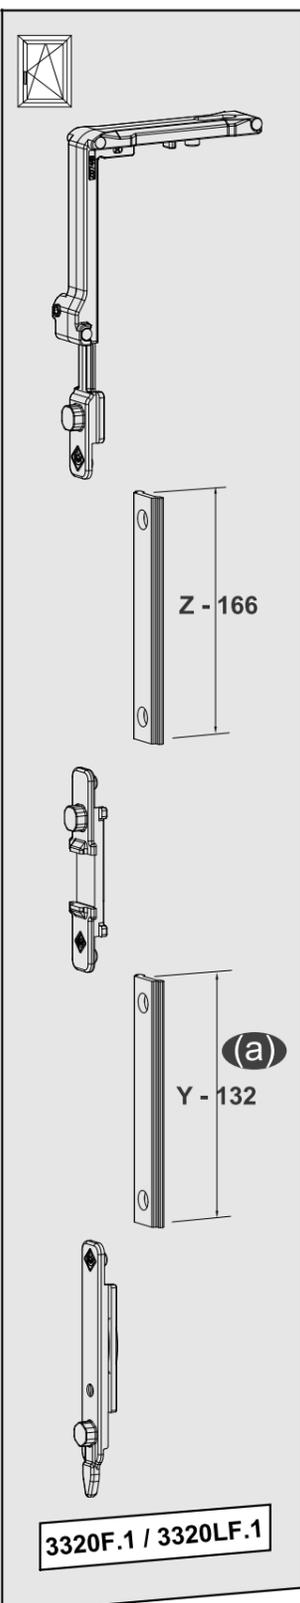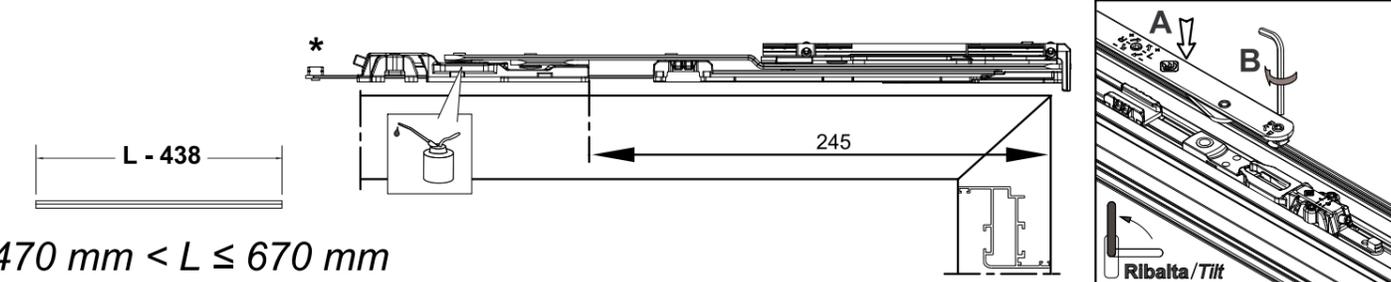

COD.	DES.
330X.10S/D	Kit cerniere brac. corto Kit hinge short arm
330XL.10S/D	Kit cerniere brac. corto logica Kit hinge short arm logic
330X.11S/D	Kit cerniere brac. lungo Kit hinge long arm
330XL.11S/D	Kit cerniere brac. lungo logica Kit hinge long arm logic

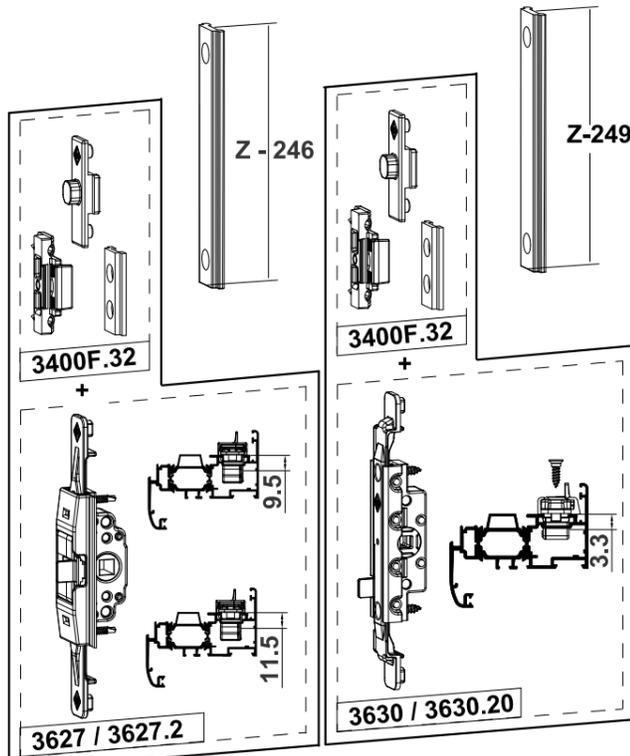

LOGICA DOPPIA ANTA DOUBLE SASH TBT	
(a)	Y - 140
(b)	Y - 171
(c)	Y - 174

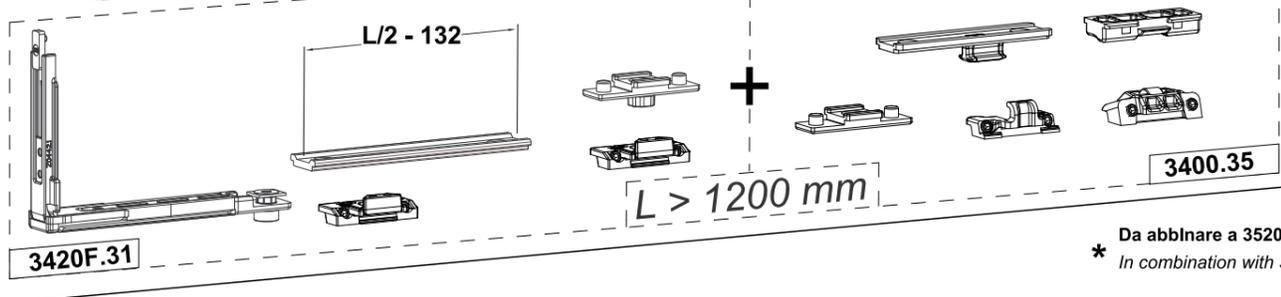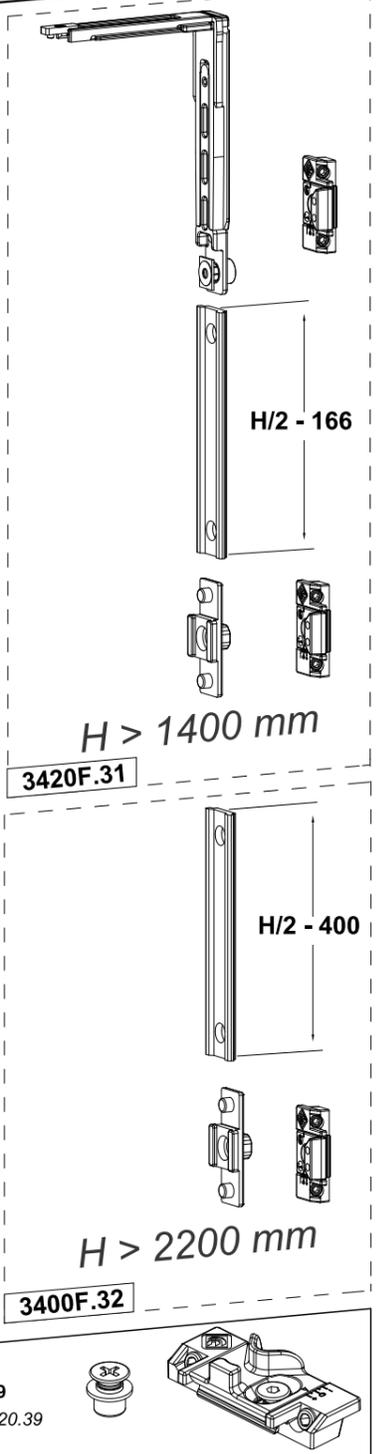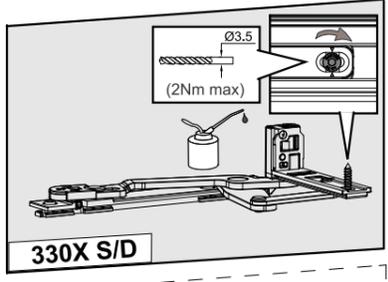

Da abbinare a 3520.39  
\* In combination with 3520.39